



Thank you for allowing ERS into your home to install a Vapor Mitigation System. Below are a few guidelines to ensure your system runs correctly.

Operating Guidelines

1. The manometer on the pipe should have uneven levels if running properly. If the level of red oil in the manometer is even the system is not providing proper suction.
2. The system should operate at a low noise level. If it is gurgling or grinding please shut it off.
3. All pipes should be connected and secure.
4. The system switch should always be in the ON position. The fan is self lubricating. Turning the fan off for extended periods will damage it.
5. Please do not allow children to play or swing on any part of the system.



If there are any questions or concerns about the operation of your vapor mitigation system please contact ERS at 812.500.0068